
## ACCY-I, ACCY-IX, ACCY-IB, ACCY-IBX Wiring Diagram and Installation Notes

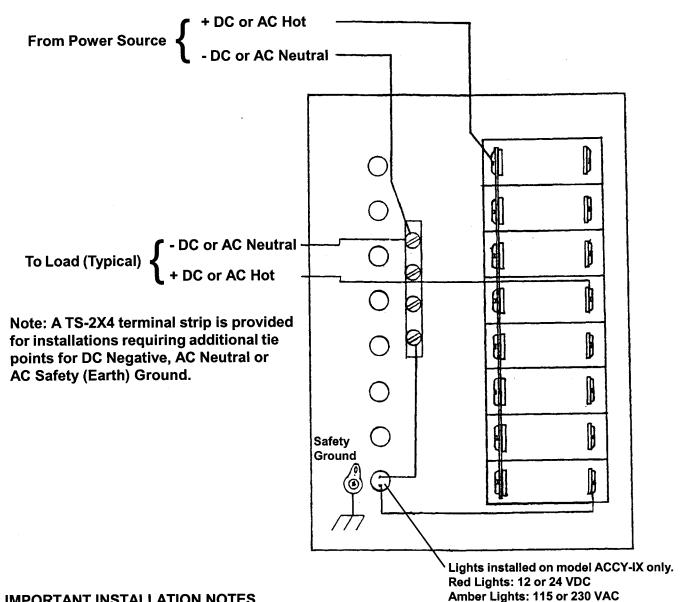

## IMPORTANT INSTALLATION NOTES

- 1. This panel may be used for AC or DC but not both. Mixing voltages will result in damage to the panel and/or powered equipment. (Note: DC lights are installed standard on ACCY-IX; the panel must be factory modified with AC lights for use in an AC application. Contact the factory for more information.)
- 2. If used in an AC application, please note: 40 and 50 amp breakers are rated to a maximum of 120 VAC line-to-neutral or 240 VAC line-to-line. They are not rated for 240 VAC line-to-neutral systems.
- 3. The maximum current capacity of the installed bus bar is 50 amps.
- 4. See the reverse of this sheet for important information regarding panel wiring to conform to USCG regulations and ABYC standards.

D-ACCY-I As of July 2001

U.S.A. HEADQUARTERS

P.O. Box 1306, Newport Beach, CA 92663 Phone: 714-751-0488 Fax: 714-957-1621

E-Mail: sales@newmarpower.com

ELECTRONIC POWER PRODUCTS Phone:+31-35-603-2494 Fax:+31-35-603-2149 COMMUNICATION - NAVIGATION www.newmarpower.com

**EURO WAREHOUSE** 

E-Mail: sales@newmarpower.com